


# HP Color LaserJet CM6040 MFP Service Manual


['Click' to download complete Manual](#)

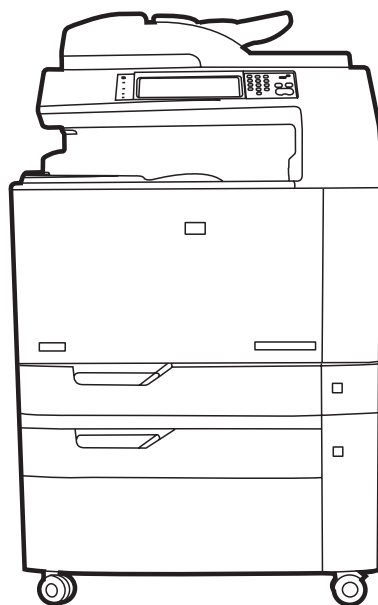

**CM6030 MFP  
CM6040 MFP**



**CM6030f MFP  
CM6040f MFP**

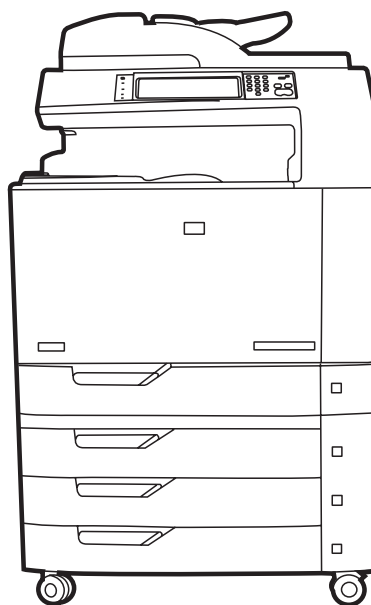



# HP Color LaserJet CM6040 MFP Series

## Service Manual

service-repairmanual.com



## Copyright and License

© 2008 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Part number: Q3938-90953

Edition 1, 04/2008

## Trademark Credits

Adobe®, Acrobat®, and PostScript® are trademarks of Adobe Systems Incorporated.

Corel® is a trademark or registered trademark of Corel Corporation or Corel Corporation Limited.

Microsoft®, Windows®, and Windows NT® are U.S. registered trademarks of Microsoft Corporation.

Windows Vista™ is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

PANTONE® is Pantone, Inc's check-standard trademark for color.

UNIX® is a registered trademark of The Open Group.

ENERGY STAR® and the ENERGY STAR logo® are U.S. registered marks of the United States Environmental Protection Agency.

---

# Table of contents

## 1 Product basics

Product comparison .....	2
Product features .....	4
Product walkaround .....	7
Front view .....	7
HP Color LaserJet CM6040 MFP Series .....	7
Back view .....	8
Interface ports .....	9
Serial number and model number location .....	9
Supported operating systems .....	11

## 2 Control panel

Use the control panel .....	14
Control-panel layout .....	14
Home screen .....	15
Buttons on the touchscreen .....	16
Control-panel help system .....	16
Navigate the Administration menu .....	17
Information menu .....	18
Default Job Options menu .....	20
Default Options for Originals .....	20
Image adjustment .....	21
Default Copy Options .....	22
Default Fax Options .....	23
Default E-mail Options .....	24
Default Send to Folder Options .....	25
Default Print Options .....	26
Time/Scheduling menu .....	27
Management menu .....	29
Initial Setup menu .....	31
Networking and I/O .....	31
Fax Setup .....	38
E-mail Setup .....	41
Send Setup menu .....	41

Device Behavior menu .....	42
Print Quality menu .....	49
Troubleshooting menu .....	53
Resets menu .....	59
Service menu .....	60

### 3 Paper and print media

Understand paper and print media use .....	62
Supported paper and print media sizes .....	63
Supported paper types .....	66
Special paper or print media guidelines .....	68
Load paper and print media .....	69
Load Tray 1 .....	69
Print envelopes .....	70
Load trays 2, 3, 4, or 5 .....	70
Load standard-sized media into trays 2, 3, 4, or 5 .....	70
Load undetectable standard-sized media into Tray 2, 3, 4, and 5 .....	72
Load custom-size media into tray 2, 3, 4, or 5 .....	73
Load large size paper into Tray 3, 4, or 5 .....	74
Load letterhead, pre-printed, or pre-punched paper .....	74
Change the Image Rotation setting .....	75
Choose the correct orientation for loading letterhead, pre-printed, or pre-punched paper .....	75
Configure trays .....	80
Configure a tray when loading paper .....	80
Configure a tray to match print job settings .....	80
Automatic media type sensing (auto sense mode) .....	80
Auto sense settings .....	81
Select the paper by source, type, or size .....	81
Source .....	81
Type and Size .....	82
Choose an output location .....	83
Standard output bins .....	83
Optional output accessories .....	83
3-bin stapler/stacker features .....	84
Booklet maker finisher features .....	84
Accessory workaround .....	84
Use the booklet-making feature .....	85
Create a booklet from the print driver .....	86
Create a booklet from a copy .....	86
Configure the accessory operation mode .....	87
Select the operating mode at the control panel .....	87
Select the operating mode in the printer driver .....	87
Select the operating mode in the printer driver (Mac OS X) .....	87

## 4 Manage and maintain the product

Information pages .....	90
HP Easy Printer Care .....	92
Open the HP Easy Printer Care software .....	92
HP Easy Printer Care software sections .....	92
Embedded Web server .....	95
Open the embedded Web server by using a network connection .....	95
Embedded Web server sections .....	96
Use HP Web Jetadmin software .....	99
Security features .....	100
Secure the embedded Web server .....	100
Foreign Interface Harness (FIH) .....	100
Requirements .....	100
Use the FIH .....	100
Enable the FIH portal .....	100
Disable the FIH portal .....	101
Secure Disk Erase .....	101
Data affected .....	101
Gain access to Secure Disk Erase .....	102
Additional Information .....	102
DSS authentication .....	102
Lock the control-panel menus .....	102
Manage supplies .....	103
Print-cartridge storage .....	103
HP policy on non-HP print cartridges .....	103
HP fraud hotline and Web site .....	103
Replace supplies .....	104
Locate supplies .....	104
Supply replacement guidelines .....	104
Approximate replacement intervals for supplies .....	105
Change print cartridges .....	105
Change image drums .....	108
Install memory .....	111
Install DDR memory DIMMs .....	111
Enable memory .....	114
Enable memory for Windows 2000 and XP .....	114
Install an HP Jetdirect or EIO print server card or EIO hard disk .....	115
Replace the staple cartridge .....	117
Replace saddle stitch staple cartridges in the booklet maker .....	119
Clean the product .....	122
Clean the outside of the product .....	122
Clean the product interior .....	122

Clean the 3X500 sheet input tray .....	124
Clean the IPTU .....	125
Clean the touchscreen .....	125
Clean the scanner glass .....	125
Cleaning the ADF delivery system .....	126
Clean the ADF delivery system .....	126
Clean the ADF rollers .....	127
ADF maintenance kit .....	129
Calibrate the scanner .....	130
Upgrade the firmware .....	131
Determine the current firmware version .....	131
Download new firmware from the HP Web site .....	131
Transfer the new firmware to the product .....	131
Use FTP to upload the firmware through a browser .....	131
Use FTP to upgrade the firmware on a network connection .....	132
Use HP Web Jetadmin to upgrade the firmware .....	133
Use MS-DOS commands to upgrade the firmware .....	133
Use the HP Jetdirect firmware .....	134
Set the real-time clock .....	135
Set the date format .....	135
Set the date .....	135
Set the time format .....	135
Set the time .....	135

## 5 Theory of operation

Basic operation .....	138
Sequence of operation .....	138
Formatter system .....	140
Sleep mode .....	140
Resolution Enhancement technology (REt) .....	140
Input/output .....	141
CPU .....	141
Memory .....	141
Hard disk .....	141
Random-access memory .....	141
DIMM slot .....	141
Nonvolatile memory .....	141
PJL overview .....	141
PML .....	142
Control panel .....	142
Engine-control system .....	143
DC controller .....	144
Solenoids .....	144



Switches .....	145
Sensors .....	146
Motors and fans .....	147
Fuser control .....	149
Fuser temperature-control circuit .....	151
Fuser over-temperature protection .....	152
Fuser-failure detection .....	153
Fuser identification .....	153
Fuser-life detection .....	154
Relay-failure detection .....	154
Low-voltage power supply .....	154
Overcurrent/overvoltage protection .....	155
Safety .....	155
Voltage detection .....	155
Sleep (powersave) mode .....	155
High-voltage power supply .....	155
Laser/scanner system .....	158
Image-formation system .....	160
Image-formation process .....	161
Step 1: Pre-exposure .....	162
Step 2: Primary charging .....	162
Step 3: Laser-beam exposure .....	163
Step 4: Development .....	163
Step 5: Primary transfer .....	164
Step 6: Secondary transfer .....	164
Step 7: Separation .....	165
Step 8: Fusing .....	165
Step 9: ITB cleaning .....	166
Step 10: Drum cleaning .....	166
Print cartridge .....	167
Imaging drum .....	168
Developing roller engagement and disengagement .....	170
Intermediate transfer belt (ITB) unit .....	171
Primary-transfer-roller engagement and disengagement .....	171
ITB unit detection .....	173
Secondary-transfer-roller unit .....	175
Calibration .....	175
Color-misregistration control .....	176
Image stabilization control .....	177
Pickup, feed, and delivery system .....	178
Pickup-and-feed unit .....	181
Cassette pickup .....	183
Cassette paper-size and cassette-presence detection .....	183
Cassette lift operation .....	185

Cassette paper-level and paper-presence detection .....	186
Multifeed prevention .....	187
Multipurpose tray pickup .....	188
Multipurpose tray last-paper detection .....	189
Paper feed .....	190
Skew-feed prevention .....	191
Paper-type detection .....	192
Feed-speed control .....	193
Fusing and delivery unit .....	195
Loop control .....	195
Pressure-roller pressurization control .....	196
Duplexing unit .....	197
Duplexing reverse and feed control .....	198
Jam detection .....	199
Optional input trays .....	201
Paper-feeder pickup and feed operation .....	204
Scanner component .....	206
Product boards .....	207
Scanner system block diagram .....	208
Scanner image-data path .....	209
Scanner power topology .....	210
Scanner power states .....	211
Sensor topology .....	212
Boards I/Os .....	215
Scanner operation flow .....	217
ADF .....	221
Input tray .....	221
ADF simplex-printing operation sequence .....	221
ADF duplex-printing operation sequence .....	222
Multifeed operation .....	223
End of a scan job operation .....	224
Paper pick and separation operation .....	224
Deskew .....	225

## 6 Removal and replacement

Removal and replacement strategy .....	228
Introduction .....	228
Required tools .....	229
Types of screws .....	229
Service approach .....	230
Before performing service .....	230
After performing service .....	230
Parts removal order .....	231

User-replaceable parts .....	232
Fuser .....	233
Transfer roller .....	236
Intermediate transfer belt (ITB) .....	238
Tray 1 pickup and separation rollers .....	241
Tray 2, 3, 4, and 5 pickup rollers .....	243
Formatter .....	245
Tray 2 .....	248
Trays 3, 4, and 5 .....	248
Service-replaceable parts .....	249
Secondary transfer unit .....	249
Multipurpose drive unit .....	254
Multipurpose-tray guide (Tray 1) unit .....	258
Cassette (Tray 2) pickup unit .....	259
Rear-left cover .....	260
Rear-right cover .....	261
Rear cover .....	262
Low-voltage power-supply unit .....	263
High-voltage power supply PCA (A) .....	264
Lifter-drive unit .....	266
Fuser motor .....	269
Intermediate-transfer belt (ITB) motor .....	270
Face-down output bin .....	271
Left cover .....	272
Laser/scanner fan duct .....	273
Print-cartridge driver PCA .....	275
High-voltage power supply PCA (B) .....	277
Formatter case .....	279
DC controller PCA .....	281
Environmental sensor .....	283
Image-drum motor .....	284
Fuser fan .....	286
Print-cartridge feed motor (black) .....	287
Print-cartridge feed motor (yellow, magenta, and cyan) .....	288
Cartridge fan unit .....	289
Laser/scanner fan unit .....	290
Fuser power-supply unit .....	291
Primary transfer-roller disengagement motor .....	292
Print-cartridge drive unit (yellow and magenta) .....	293
Print-cartridge drive unit (cyan and black) .....	298
Print-cartridge interface PCA (cyan and black) .....	299
Print-cartridge interface PCA (yellow and magenta) .....	300
Main drive unit .....	301
Cartridge fan duct .....	303

Duplex switchback tray .....	304
Front lower cover .....	305
Inner cover .....	306
Rear scanner cover .....	308
Right upper cover .....	309
Front door .....	310
Front door assembly .....	311
Color-misregistration and image-density sensor unit .....	312
Pressure-release sensor unit .....	313
Scanner cover .....	315
Laser/scanner assembly (yellow and magenta) .....	316
Laser/scanner assembly (cyan and black) .....	319
VOC fan .....	322
Duplexing reverse unit .....	323
Face-down delivery unit .....	324
Face-down cover .....	326
Right-door assembly .....	327
Duplexing feed unit .....	329
Multipurpose-tray (Tray 1) pickup unit .....	331
Thermopile unit .....	334
Front-lower cover .....	335
ITB duct .....	336
Optional input trays .....	337
1x500-sheet input tray .....	337
Right door .....	337
Lower-rear cover .....	339
Front-right cover .....	340
Right cover .....	341
Front-upper cover .....	342
Lower-left cover .....	343
Front-lower door .....	344
Box .....	345
Pickup unit .....	346
Input tray is attached .....	346
Paper feeder is not attached .....	347
Auto-close unit .....	349
Pickup motor .....	350
Paper-feeder driver PCA .....	351
3x500-sheet input tray .....	352
Right door .....	352
Lower-rear cover .....	352
Front-right cover .....	352
Right cover .....	352
Front-upper cover .....	352

Left cover .....	352
Pickup unit (middle cassette) .....	353
Pickup unit (lower cassette) .....	354
Pickup unit (upper cassette) .....	354
Paper feeder is attached .....	354
Paper feeder is not attached .....	355
Auto-close unit .....	357
Pickup motor .....	357
Paper-feeder driver PCA .....	357
Scanner .....	358
Optical scanner .....	358
Upper-left scanner cover .....	362
Upper-right scanner cover .....	363
Control panel .....	364
Front scanner cover .....	366
Lower-left scanner cover .....	368
Lower-right scanner cover .....	370
Top scanner cover .....	371
Glass assembly .....	372
Carriage unit .....	373
Configure the SCB when replacing the carriage unit, inverter, SCB, or optical scanner .....	378
Pulley assembly and motor unit .....	380
Rail .....	383
Inverter .....	384
Inverter unit .....	384
Lid sensor .....	386
SCB, CPB, and SCUID .....	388
Power-supply unit .....	391
Scanner fan .....	393
SCB fan .....	394
Control panel fan .....	395
Fan filter .....	396
ADF .....	397
ADF assembly .....	397
ADF input tray sensors .....	399
Separation floor assembly .....	401
Diverter .....	403
Jam cover .....	404
Hinge assemblies .....	406
Float assembly .....	407
White backing .....	410
Front end cover (cap) .....	412
Rear end cover (cap) .....	414

ADF PCA and wire harness .....	417
Input tray .....	419

## 7 Solve problems

Introduction .....	422
Troubleshooting process .....	423
Determine the problem source .....	423
Pre-troubleshooting checklist .....	423
Troubleshooting checklist .....	424
Troubleshooting flowchart .....	426
Power subsystem .....	427
Power-on checks .....	427
Power-on troubleshooting overview .....	427
Tools for troubleshooting .....	429
Internal print-quality test pages .....	429
Print-quality-troubleshooting pages .....	429
Diagnostics page .....	429
Cleaning page .....	430
Configuration pages .....	431
Configuration page .....	431
HP embedded Jetdirect page .....	433
Embedded protocol page .....	434
Finding important information on the configuration pages .....	435
Solve performance problems .....	436
Solve connectivity problems .....	437
Solve direct-connect problems .....	437
Solve network connectivity problems .....	437
Solve network printing problems .....	437
Verify communication over the network .....	438
Control-panel message types .....	439
Control-panel messages .....	440
Event log messages .....	510
Print an event log .....	510
Show an event log .....	510
Clear the event log .....	510
Event log message .....	511
Paper-handling problems .....	518
Jams .....	518
Common causes of jams .....	518
Jam locations .....	519
Clear jams .....	520
Jam sensors .....	520
AREA 1: Jams in the output bin .....	521

AREA 2 and 3: Jams in the fuser and transfer area .....	523
AREA 4: Jams in the duplex area .....	530
AREA 5: Jams in Tray 2 and the internal paper path .....	534
AREA 6: Jams in Tray 1 .....	538
AREA 7: Jams in optional Trays 3, 4, and 5 .....	542
AREA 8: Jams in the optional finishing devices .....	546
AREA 9: Jams in the ADF .....	552
Clear staple jams .....	553
Jam recovery .....	557
Product feeds multiple sheets .....	557
Product pulls from incorrect tray .....	558
Product feeds incorrect page size .....	558
Paper does not feed automatically .....	559
Paper does not feed from Tray 2, 3, 4, or 5 .....	559
Transparencies or glossy paper will not feed .....	560
Envelopes jam or will not feed in the product .....	560
Output is curled or wrinkled .....	561
Product will not duplex or duplexes incorrectly .....	561
Solve image quality problems .....	563
Example print quality problems .....	563
Repetitive defects ruler .....	563
Overhead transparency defects .....	565
Print quality problems associated with the environment .....	565
Print quality problems associated with jams .....	565
Optimize and improve image quality .....	565
Use supported paper .....	566
Calibrate the product .....	566
Specify the correct paper type .....	566
Clean the fuser .....	567
Respond to control-panel error messages .....	568
Clean the registration second transfer assembly .....	568
Use manual print modes .....	570
Print-quality-troubleshooting pages .....	571
Image-quality issues .....	574
Interface troubleshooting .....	579
Communication checks .....	579
EIO troubleshooting .....	579
Engine diagnostics .....	580
LED diagnostics .....	580
Understand lights on the formatter .....	580
HP Jetdirect LEDs .....	580
Heartbeat LED .....	581
Understand lights on the SCB .....	581
Understand lights on the copy-process board (CPB) .....	583

Engine-test button .....	583
Troubleshooting menu .....	584
Diagnostics mode .....	585
Diagnostics that put the engine into the special diagnostics mode .....	585
Diagnostic tests .....	586
Disable cartridge check .....	587
Paper-path sensors test .....	587
Paper-path test .....	589
Manual sensor test (special-mode test) .....	590
Component tests .....	592
Component test (special-mode test) .....	592
Transfer-motors test .....	592
Belt-only test .....	592
Image-drum motors test .....	592
CMYK-laser test .....	593
Fuser-motor test .....	593
Fuser pressure-release motor test .....	593
Color-alienation motor test .....	593
ITB-contact/alienation test .....	593
Paper-transport motor test .....	594
Tray-1 pickup-solenoid test .....	594
Tray-2 pickup-motor test .....	594
Duplexer reverse-motor test .....	594
Duplexer refeed-motor test .....	594
Print/stop test .....	596
Color-band test .....	597
Scanner tests .....	597
Service-mode functions .....	598
Service menu .....	598
Product resets .....	600
NVRAM initialization .....	600
Solve scanner problems .....	601
Solve fax problems .....	602
Solve e-mail problems .....	603
Validate the SMTP gateway address .....	603
Validate the LDAP gateway address .....	603
Diagrams .....	604
Connectors .....	604
DC controller PCA .....	604
PCAs .....	604
Product base .....	607
1 x 500 input tray .....	610
3 x 500 input tray .....	610
IPTU .....	611



Fans .....	612
Product base .....	612
Sensors .....	612
Product base .....	613
1 x 500 input tray .....	615
3 x 500 input tray .....	616
IPTU .....	617
Motors .....	618
Product base .....	618
1 x 500 input tray .....	619
3 x 500 input tray .....	620
IPTU .....	621
Solenoids .....	621
Product base .....	621
1 x 500 input tray .....	622
3 x 500 input tray .....	622
Switches .....	623
Product base .....	623
1 x 500 input tray .....	624
3 x 500 input tray .....	624
Block diagrams .....	626
Main assemblies .....	626
Main parts .....	629
PCAs .....	630
1 x 500 input tray .....	631
3 x 500 input tray .....	632
Intermediate paper-transfer unit (IPTU) .....	633
Scanner .....	633
Components (scanner) .....	633
ADF .....	634
Sensors (ADF) .....	634
General timing chart .....	635
General circuit diagrams .....	636
Signals .....	640

## 8 Output accessories and intermediate paper transfer unit (IPTU)

Theory of operation .....	670
Intermediate paper transfer unit (IPTU) .....	670
Basic operation .....	670
Feed operation .....	672
Jam detection .....	672
3-bin stapler/stacker .....	673
Basic operation .....	673

Electrical circuitry .....	674
Feed drive system .....	674
Construction of the control system .....	675
Paper delivery path (stapler/stacker and booklet maker) .....	677
Intermediate-process output-bin assembly (stapler/stacker and booklet maker) .....	681
Stack job offset .....	681
Process output bin paper-stacking operation .....	683
Offset operation .....	683
Stack trailing-edge assist operation .....	684
Stack delivery operation .....	684
Staple operation (stapler/stacker and booklet maker) .....	685
Staple unit .....	688
Shift the staple unit .....	689
Stack operation (stapler/stacker and booklet maker) .....	691
Output bin operation .....	691
Shutter operation .....	693
Jam detection .....	694
Power supply .....	695
Power-supply route .....	695
Protection function .....	695
HP Booklet Maker/Finisher accessory .....	696
Basic operation .....	696
Basic operation of the stacker unit .....	696
Electrical circuitry of the stacker unit .....	696
Basic operation of the booklet maker unit .....	697
Electrical circuitry for the booklet maker unit .....	698
Feed drive system .....	698
Paper-delivery path (booklet maker only) .....	703
Basic operation for the booklet maker .....	704
Control of the inlet flappers .....	708
Control of paper movement .....	711
Alignment of paper .....	713
Control the phase of the crescent roller .....	715
Overview of folding .....	717
Control of stack movement .....	718
Fold the stack .....	718
Double folding a stack .....	721
Intermediate-process-tray assembly .....	722
Staple operation .....	723
Stapler unit .....	723
Stapling operation .....	724
Stitcher (stapler) unit .....	724
Stack operation .....	725

Jam detection .....	725
Detect jams in the stacker unit .....	726
Detect jams in the booklet maker unit .....	726
Power supply .....	727
Power-supply route for the stacker unit .....	727
Protective function for the stacker unit .....	728
Power-supply route for the booklet maker unit .....	728
Protective function for the booklet maker unit .....	728
Specifications .....	729
Accessory specifications .....	729
Stapler/stacker output-bin capacities .....	734
Booklet-maker output-bin capacities .....	735
Removal and replacement .....	736
Intermediate paper transfer unit (IPTU) .....	736
IPTU .....	736
Upper guide assembly .....	738
Rear cover .....	740
Fan unit .....	744
Right belt-drive unit .....	745
Left belt-drive unit .....	748
Finisher lock-assembly .....	750
IPTU paper-feed motor 1 .....	752
IPTU paper-feed motor 2 .....	753
IPTU driver PCA .....	754
Stapler/stacker and Booklet maker .....	755
Identify the booklet maker and stapler/stacker .....	755
Remove the booklet maker and stapler/stacker from the printer .....	756
External covers .....	759
Entrance lower-guide assembly .....	759
Front door .....	760
Rear cover .....	761
Front-foot cover .....	762
Rear-foot cover .....	762
Front inside-upper cover .....	763
Front inside-lower cover (booklet maker only) .....	764
Left-upper cover .....	765
Top door .....	767
Grate-shaped upper guide .....	769
Move output bins 1 and 2 .....	770
Grate-shaped lower guide .....	772
PCA cover .....	773
Drive system .....	774
Stapler .....	774
Stapler assembly .....	776

Swing unit .....	779
Upper crossmember unit .....	783
Saddle unit (booklet maker only) .....	786
Saddle-stapler assembly (booklet maker only) .....	790
Positioning plate unit (inner side-plate assembly) (booklet maker only) .....	791
Document feed system .....	794
Operation-tray assembly .....	794
Output-bin 1 .....	799
Output-bin 2 .....	801
Upper output bin (stapler-stacker only) .....	803
Buffer rollers .....	804
Booklet-delivery output bin (booklet maker only) .....	805
Booklet-delivery output bin unit (booklet maker only) .....	806
Return roller unit .....	807
Pressure roller unit .....	809
Entrance upper guide unit .....	814
Upper-delivery guide (booklet maker only) .....	816
Inlet feed unit (stapler-stacker only) .....	817
Inlet feed unit (booklet maker only) .....	820
Paper-folding roller (booklet maker only) .....	823
Electrical system .....	828
Stacker controller PCA .....	828
Saddle-stitcher controller PCA (booklet maker only) .....	829
Solve problems .....	830
Intermediate paper-transfer unit (IPTU) .....	830
.....	830
Stapler/stacker and booklet maker .....	830
Individual component diagnostics .....	830
Manual sensor test .....	830
Component test .....	831
LED diagnostics .....	832
Diagrams .....	834
Cross sections .....	834
Sensors .....	837
Microswitches .....	841
Solenoids .....	843
Motors .....	845
Clutches .....	847
PCA .....	848
Variable resistors, LED, and check pins .....	851
Circuit diagrams .....	854
Adjustments .....	859
Adjust the alignment position .....	859

Adjust the staple position .....	859
Adjust the folding position to the stitch position (Booklet maker only) .....	861
Adjust the stitcher unit .....	864

## 9 Parts and diagrams

Order parts, accessories, and supplies .....	868
Order directly from HP .....	868
Order directly through the software .....	868
Orderable and non-orderable parts .....	868
Replacement kits .....	870
Printer supplies and accessories .....	870
Printer .....	874
Printer parts .....	874
Input-accessory devices .....	918
Input trays .....	918
Output-accessory devices .....	936
Intermediate paper-transfer unit (IPTU) .....	936
Stapler/stacker and booklet-maker .....	947
Automatic document-feeder (ADF) .....	1018
Automatic document feeder (ADF) assemblies .....	1018
Scanner .....	1034
Scanner assemblies .....	1034
Alphabetical parts list .....	1068
Numerical parts list .....	1096

## Appendix A Service and support

Hewlett-Packard limited warranty statement .....	1126
Print cartridge limited warranty statement .....	1128
Color LaserJet Fuser Kit, Transfer Kit, and Roller Kit Limited Warranty Statement .....	1129
Customer self repair warranty service .....	1130
Customer support .....	1131
Availability of support and service .....	1132
HP maintenance agreements .....	1133
On-site service agreements .....	1133
Priority onsite service .....	1133
Next-day onsite service .....	1133
Weekly (volume) on-site service .....	1133

## Appendix B Product specifications

Physical specifications .....	1136
Electrical specifications .....	1137
Acoustic specifications .....	1138

Environmental specifications .....	1139
------------------------------------	------

## Appendix C Regulatory information

Compliance with FCC regulations .....	1142
Declaration of Conformity .....	1143
Declaration of Conformity .....	1144
Environmental product stewardship program .....	1145
Protecting the environment .....	1145
Ozone production .....	1145
Power consumption .....	1145
Toner consumption .....	1145
Paper use .....	1145
Plastics .....	1145
HP LaserJet print supplies .....	1145
Return and recycling instructions .....	1146
United States and Puerto Rico .....	1146
Multiple returns (more than one cartridge) .....	1146
Single returns .....	1146
Shipping .....	1146
Non-U.S. returns .....	1146
Paper .....	1146
Material restrictions .....	1146
Disposal of waste equipment by users in private households in the European Union .....	1147
Material Safety Data Sheet (MSDS) .....	1147
For more information .....	1148
Certificate of volatility .....	1149
Types of memory .....	1149
Volatile memory .....	1149
Non-volatile memory .....	1149
Hard-disk-drive memory .....	1149
Safety statements .....	1150
Laser safety .....	1150
Canadian DOC regulations .....	1150
VCCI statement (Japan) .....	1150
Power cord statement (Japan) .....	1150
EMI statement (Korea) .....	1150
EMI statement (Taiwan) .....	1151
General telecom statement .....	1151
Laser statement for Finland .....	1151
Substances Table (China) .....	1152

Index .....	1153
-------------	------